
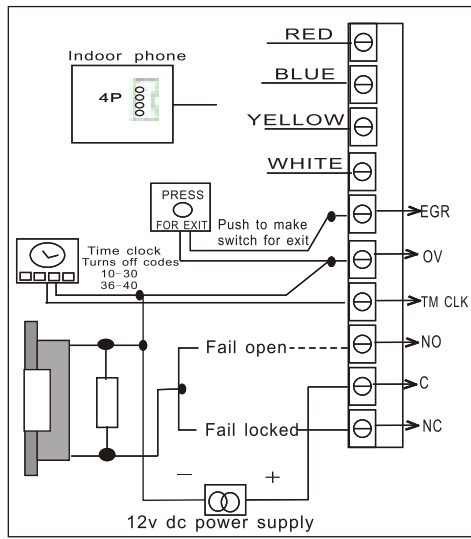



# NC-DS2-KP

## Wiring Diagram

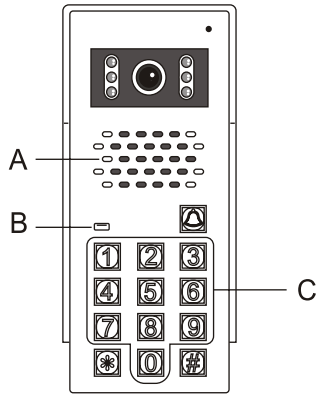

- Additional:
- A. Light sensor
  - B. LED Indicator
  - C. Keypad access

### From Left to Right Need 2 Power Supplies

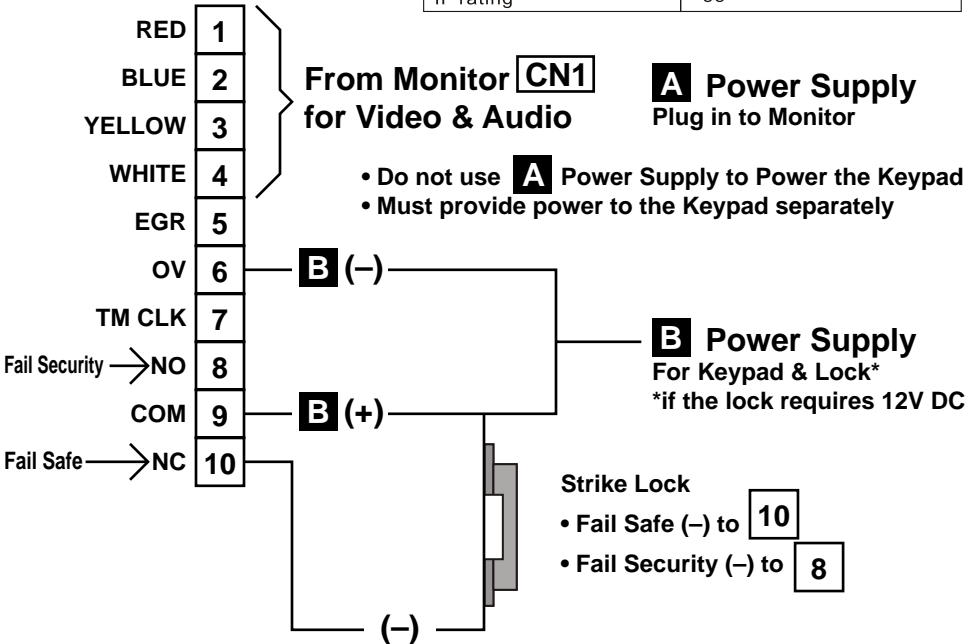

\* Only works with 12V DC Lock System

Specification	
Power	DC 14.5V
Electric current	Working ≤ 200mA
Camera lens	1/3 CCD 72 degree ken
Illumination	0.05LUX
Communication duration	120s
Communication method	Duplex communication type
Working Temperature	-20-55℃
IP rating	55

- ATTENTION**
- 1: Input A 4 Digit Password To Have The Door Striked Or The Lock Unlocked.
  - 2: The Original Factory Defaulted Password Is \*1234.

#### Change the master code

- 1: Shut off the power of the unit and keep pressing the button \*
- 2: switch on the power pressing the button \* down, the unit will then give a long continuous tone.
- 3: when the tone stopped, Another sound will be heard and input your new 4 digit programmers code.

#### Entering programming mode

- 1: press the button \* plus your 4 digit master code.
- 2: you are successfully enter into the programming mode when three sound is heard and the LED is flashing
- 3: press the button \* to exit programming mode.

#### Adding user codes

- 1: Enter into the programming mode interface.
- 2: it is available for 40 groups code, 01 to 40 is the group number, which should be input in front of the 4 digit code. from 31 to 40 group codes, input once 4 digit code to open the door for a long time until twice input the same code to have it closed.
- 3: input 4 digit code, a two sound is heard, it is unsuccessful and indicating the code is existent at somewhere; if a three sound is heard, it is successfully set.
- 4: press the button \* to exit.

#### Delete user codes

- 1) enter into the programming mode.
- 2) Enter one of the code group from 01 to 40
- 3) press the button # to delete the code of this group
- 4) it is successfully deleted when a three sound heard. press the button \* to exit.

#### Delete a codes directly

- 1) enter into the programming mode.
- 2) press the button # to hear a two sound.
- 3) input 4 digit code that wanted to be deleted
- 4) it is successfully deleted when a three sound heard. press the button \* to exit.

#### Delete all codes

- 1) enter programming mode .
- 2) press the button # to hear a two sound.
- 3) one more press the button # to hear another two sound.
- 4) continuously press the button # at 7 times to have the system deleted all setting. Unlocking time change to be second while original code won't be changed. The system will resume after a five sound heard.

#### Set the locking time

- Factory set is 05 second.
- 1) enter programming mode .
  - 2) Enter 00 (this is a special code group)
  - 3) enter a desired lock/delay operation time in a two digit format (01 to 99 seconds )
  - 4) press the button \* to exit.