

### TURBO HD

# TVI Turret & Bullet Camera

### User Manual

are any questions, or requests, please do not hesitate to contact the dealer. Thank you for purchasing our product. If there

this manual. We will readily improve or update content is subject to change without notice. incorrect places or printing errors, and the This manual may contain several technical the products or procedures described in the The updates will be added to the new version of

camera parameters and functions. Please refer to the product specification for

## **Regulatory Information**

a residential area is likely to cause harmful required to correct the interference at his own interference in which case the user will be communications. Operation of this equipment in cause harmful interference to radio in accordance with the instruction manual, may generates, uses, and can radiate radio a commercial environment. This equipment interference when the equipment is operated in reasonable protection against harmful Rules. These limits are designed to provide digital device, pursuant to part 15 of the FCC FCC compliance: This equipment has been frequency energy and, if not installed and used tested and found to comply with the limits for a

### **FCC Conditions**

Rules. Operation is subject to the following two This device complies with part 15 of the FCC

- 1. This device may not cause harmful
- 2. This device must accept any interference cause undesired operation. received, including interference that may

## **EU Conformity Statement**

with "CE" and comply therefore with supplied accessories too are marked the applicable harmonized Europear This product and - if applicable - the

the RoHS Directive 2011/65/EU. standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC,



Union. For proper recycling, return municipal waste in the European cannot be disposed of as unsorted Products marked with this symbol 2012/19/EU (WEEE directive):

or dispose of it at designated collection points. upon the purchase of equivalent new equipment For more information see: www.recyclethis.info this product to your local supplier



municipal waste in the European cannot be disposed of as unsorted 2006/66/EC (battery directive): This product contains a battery that

supplier or to a designated collection point. For this symbol, which may include lettering to See the product documentation for specific more information see: www.recyclethis.info. For proper recycling, return the battery to your indicate cadmium (Cd), lead (Pb), or mercury (Hg) battery information. The battery is marked with

### 1 Introduction

## 1.1 Product Features

makes it suitable for surveillance system and sensor with high sensitivity and advanced circuit low image distortion and low noise, etc., which design technology.It features high resolution, This series of camera adopts new generation

- High performance CMOS sensor and high image processing system. resolution bring high-quality image;
- Low illumination;
- Support auto white balance, auto gain control, OSD menu, parameters are configurable; electronic shutter control;
- Support image effect adjustment;
- Unit transmission control;
- Advanced 3-axis design meets different installation requirements.



specification of each model menu. For actual operation, please refer to the Cameras in some models do not support OSD

### 1.2 Overview

## 1.2.1 Overview of Type I Camera

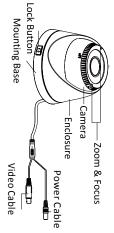


Figure 1-1 Overview of Type I Camera

## 1.2.2 Overview of Type || Camera

Sun Shield

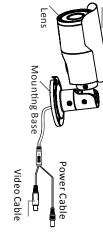


Figure 1-2 Overview of Type II Camera

## 2 Installation

### Before you start:

- Please make sure that the device in the package is in good condition and all the assembly parts are included.
- Make sure that all the related equipment is power-off during the installation.
- Check the specification of the products for the installation environment.
- Check whether the power supply is matched with your power output to avoid damage.
- Please make sure the wall is strong enough to and the mounting. withstand three times the weight of the camera
- •If the wall is the cement wall, you need to insert self-tapping screw to secure the camera. expansion screws before you install the camera. If the wall is the wooden wall, you can use
- If the product does not function properly, for repair or maintenance by yourself. service center. Do not disassemble the camera please contact your dealer or the nearest

## 2.1 Installation of Type I Camera

1.Drill the screw holes and the cable hole on the ceiling according to the supplied drill template.



2. Push the lock button to disassemble the camera from the mounting base. Figure 2-1 The Drill Template

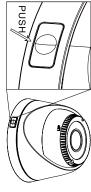


Figure 2-2 Release The Lock Screw

- 3.Fix the mounting base to the ceiling.
- Route the cables to the cable hole and connect the corresponding cables.
- Secure the camera to the mounting base by supplied screws. Keep the word UP on the camera image showing normally. being upright during the installation to make the

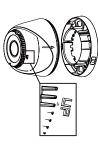


Figure 2-3 Secure the Camera

6.Adjust the camera according to the figure below to get an optimum angle

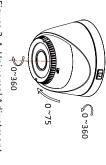


Figure 2-4 Universal Adjustment

7. Use the screwdriver to adjust the ZOOM screw image. and the FOCUS screw until you get the optimum



Figure 2-5 Zoom and Focus Adjustment

# 2.2 Installation of Type II Camera



if wall mounting is adopted. suitable for type II bullet camera. Ceiling mounting will be taken as an example in the section. And you Both wall mounting and ceiling mounting are can take steps of ceiling mounting as a reference

#### Steps

Hammer the supplied plastic expansion bolt into 1.Drill the screw holes and the cable hole in the ceiling according to the supplied drill template.

the screw holes.

4

Figure 2-6 Drill Template

- 3. Route the cables to the cable hole and connect the corresponding cables.
- 4. Fix the camera to the ceiling with the supplied screws.

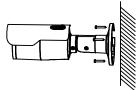



Figure 2-7 Fix the Camera to the Ceiling

- 5. Adjust the surveillance angle
- 1). Loosen No.1 adjusting screw to adjust the pan position (0° ~ 360°)
- 2).Tighten No.1 adjusting screw
- 3). Loosen No.2 adjusting screw to adjust the tilting position( $0^{\circ} \sim 90^{\circ}$ ).
- 4). Tighten No.2 adjusting screw.
- Loosen No.3 adjusting screw to adjust the rotation position (0  $^{\circ}$   $^{\sim}$  360  $^{\circ}$ ).
- 6).Tighten No.3 adjusting screw



Figure 2-8 3-axis Adjustment

- 6.Push the focus &zoom adjustment cover upward to move it aside and rotate the OSD cover to
- 7. Use the cover as a screwdriver to adjust the ZOOM screw and the FOCUS screw until you get the optimum image

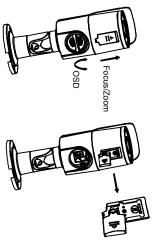

igure 2-9 Zoom and Focus Adjustment

# 3 Menu Operation

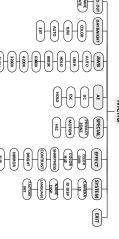


Figure 3-1 Main Menu

camera parameters. is required to select the menu and adjust the A coaxial camera controller (purchase separately)

### **3.1 VIDEO.OUT**

You can set the frame rate as 25 fps/30fps

### 3.2 DAY/NIGHT

ness of the IR LED. EXT, you can set the IR LED as Smart and CDS. If the NIGHT switches. Under the mode of the AUTO and Color, B/W, AUTO and EXT are selectable for DAY/ IR LED is selected as Smart, you can set the bright-

E DETIION DET	TIME	3. N TO D 63	2. D TO N 63	1. MODE AUTO	DAY/NIGHT	
RET	20	63	63	AUTO	IIGHT	
	4. RETURN	3. HLC	2. MOTION	1. PRIVACY	SPI	

SPECIAL ZONE

굞

color and light between parts of an image.

Contrast: Contrast enhances the difference in

Figure 3-2 DAY/NIGHT Figure 3-4 SPECIAL

#### 3.3.3 AWB

are selectable for AWB. Under the mode of AUTO Auto, User, Push, 8000k, 6000k, 4200k and 3000k as User, You need to set the R/G/B Gain manually indoor/outdoor mode. If the AWB mode is select you need to set the R-G/B-G Gain and to select an

Brightness: Brightness refers to the brightness You can set the AE mode as HOLD, DC and ESC.

of the image.

**Shutter**: Shutter denotes the speed of the shutter 1/60, 1/100, 1/120, 1/250, 1/500, 1/1k, 1/3k and You can set the shutter as AUTO, 1/25, 1/30, 1/50

Flicker: You can set the flicker status as 50HZ/60HZ to prevent image flicking.

BLC gain from 0 to 16. brightness of the whole image. You can set the **BLC**: BLC bases on the back area to enhance the

AGC: AGC optimizes the clarity of image in poor image gets darkened or blurred on the periphery LSC: LSC corrects the phenomenon where the light scene. The value of AGC can be set from 1-5

#### 1. MODE 2. R-G GAIN 3. B-G GAIN 4. RETURN 255 151 RET

Figure 3-3 AWB

### 3.3.5 SPECIAI

SX/EX/SY/EY value to define the position and size MASK PAT as OFF, GRAY, WHITE or BLACK. Set the **Privacy zone**: Select a PRIVACY area. Set the

0 second to 255 seconds. as ICON/TRANCE/OFF. Set the hold time from the SENSITIVITY from 0 to 255. Set the alarm status Motion: Set the Motion status as ON or OFF. Set

value and threshold from 0 to 255 peripheral area of the image. You can set the mask **HLC**: HLC supplements the brightness of the

Color Gain: Color gain adjust this feature to change the saturation of the color. You can set the value from 0 to 255.

Color Hue: You can adjust the image HUE from

detail that an imaging system can reproduce. **Sharpness:** Sharpness determines the amount of You can set the value from 0 to 255.

compensation value as 0 or 1. compensation of the image. You can set the bright **Bright Off.**: Bright Off. refers to the brightness You can set the value from 0 to 255.

Flip: You can set the FLIP status as ON/OFF. Mirror: You can set the Mirror status as ON/OFF.

8. RETURN	7. FLIP	6. MIRROR	5. BRIGHT OFF.	4. CONTRAST	3. SHARPNESS	2. COLOR HUE	1. COLOR GAIN	
RET	N N	ON N	ш	150	25	200	200	
	6. RETURN	5. FACTORY INIT	4. LANGUAGE	3. NAME DISP.	2. ID DISP.	1 CAMERA ID	5000	
	RET	OFF	ENG	ON	O V	255		

Figure 3-5 EFFECT Figure 3-6 SYSTEM

### **3.3.7 SYSTEM**

Select the ID display and name display status as You can set the camera ID from 0 to 255.

of the menu. Chinese and English are selectable for the language

setting the factory initialization status as ON You can restore the camera to the default by

### 3.3.8 EXIT

Exit and Save & exit are selectable